



CONTACT US!
We're here to help


info@novajoy.com

1 800 557 6682

Quick installation with step-by-step instructions

## a. (2) Mount arms b. (2) Mounting brackets c. (4) Phillip's screws a. b. c.








Attach 1 mounting bracket with 2 screws to upper arm and tighten. Repeat for lower arm.



Snap 1 of the mount arms onto outside of frame. Hook should face towards the rear of the walker. Snap the other arm onto the frame 2 inches below the first. Hook should face towards the front of the walker.

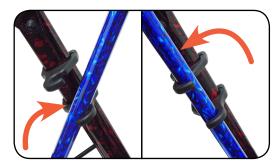

To attach cane, position tubing in between the arms, facing the openings of the hooks. Push cane forward until it engages into the cane holder.